

Daikin One+ Thermostat Commissioning Menu Outline for Single/multi-split (S21) equipment, v2.3 software

Level 1	Level 2	Level 3	Level 4	Level 5	Level 6	Default	Display only?	Conditions		
welcome	english español française	(radio buttons)				english				
	use large font (checkbox) continue					unchecked				
equipment type	unitary (radio button) single/multi-split (S21) (radio button) VRV, SkyAir, single/multi-split (P1P2) (radio button) continue	cancel continue				unitary				
	begin setup	(to smart thermostat setup with 5 main steps below)								
setup	setup options	factory reset run dealer demo mode run homeowner demo mode								
	learn more									
1. Communication	equipment type	unitary mini/multi-split (S21) VRV, SkyAir, mini/multi-split (P1P2)				unitary				
	home wifi	use wifi								
		networks	(list of available networks) search again						Only appears when "use wifi" selected	
		internet connected (check)					Yes		Only appears when connected to active wifi network.	
2. Personalization	language	english español française				english				
	use large font (checkbox)					unchecked				
	date & time	(month, day, and year selection) (hour, minute, and am/pm selection) use 24-hour format					disabled		set automatically when connect to WiFi.	
		time zone	(list of time zones)				Pacific		set automatically when connect to mobile app.	
device name	main room upstairs downstairs hallway bedroom kitchen other (other name)	(text entry for other)				main room				
degree units	fahrenheit					fahrenheit				
3. Equipment Setup	Indoor Unit: (model #)	cassette								
		Indoor Unit: (model #) (description based on model number)	(pick from list)							
		edit	(text entry)							
	Outdoor Unit: (model #)	Serial #:	(text entry)							
		unit type	wall-mount ceiling cassette single-flow cassette floor-mount					Maybe	Set automatically when model number selected from list. Default allows manual entry, also allowed if manually entered model number.	
		Outdoor Unit: (model #) (description based on model number)	(pick from list)							
	Standard filter	Number of filters	1-2				1			
		Remove equipment	Do you want to remove this equipment?		Yes/No					
		Add Equipment	indoor air quality sensor							
			Aux heat source							Can only add 1 of each type.
			Filter box							
			HEPA filter							
Aux heat source		Remove equipment	Do you want to remove this equipment?		Cancel Continue					
		Connection	Aux1							
			Aux2							
			Heat Pump is primary heat source	Control	Heat pump lockout	Heat pump lockout enable (checkbox) -20°F to 65°F in 5°F steps (-27.5°C to 17.5°C in 2.5°C steps)		disabled	15°F (-10°C)	If aux heater added. The HP lockout must be at least 10°F < aux heat lockout.
					Aux heat lockout	Aux heat lockout enable (checkbox) -10°F to 75°F in 5°F increments (-22.5°C to 22.5°C in 2.5°C steps)		disabled	50°F (10°C)	
			Aux is primary heat source	Control	T on / T off	Turn on temperature differential: -7°F to -3°F in 1°F steps (-4.0°C to -1.5 to in 0.5°C steps) Turn off temperature differential: -4°F to 1°F in 1°F steps (-2°C to 0.5°C in 0.5°C steps)		-3°F (-1.5°C)	1°F (0.5°C)	Must be at least 4°F (2°C) above Ton
	Heat pump lockout				Heat pump lockout enable (checkbox) -20°F to 65°F in 5°F steps (-27.5°C to 17.5°C in 2.5°C steps)		disabled	15°F (-10°C)	If aux heater added. The HP lockout must be at least 10°F < aux heat lockout.	
	Setpoint differential	-9°F, -7°F, -5°F, -4°F, or -2°F (-5°C to -1°C in 1°C steps)				-2°F (-1°C)				
	T on differential	Turn on temperature differential: -1 or -2°F (-0.5 or -1.0°C)				-1°F (-0.5°C)				
	T off differential	Turn off temperature differential: 1°F (0.5°C)		1°F (0.5°C)	Yes					
	Remove equipment	Do you want to remove this equipment?		Cancel Continue						
	Filter box	Number of filters	1-2				0		If filter box added.	
Remove equipment		Do you want to remove this equipment?		Cancel Continue						
HEPA filter	Number of filters	1-2				0		If HEPA filter added		
	Remove equipment	Do you want to remove this equipment?		Cancel Continue						
Error History	(date and time of error) (code - Indoor Unit #) (error description) (minor error code)									

	Clear error history?	Cancel/Continue	Yes/No					
4. System Optimization	Calibration	Temperature calibration	-7°F to 7°F in 1°F steps			0°F		
		Humidity calibration	-15% to 15% in 1% steps			0%		
	Status	Outdoor unit	Indoor unit	indoor suction temp				Emura only
			therm on/off					Emura only
			EEV open degree (pulse)					Emura only
			outdoor air temp					Emura only
			heat exchanger temp					Emura only
			discharge temperature					Emura only
			liquid pipe temp					Emura only
			outdoor fan RPM					Emura only
			power consumption					Emura only
			electric current					Emura only
			indoor suction temp					Emura only
			therm on/off					Emura only
5. Preferences	cool/heat	min/max setpoints	57°F to 90°F			57°F to 90°F	Emura only	
		deadband / overcool	Temperature setpoint dead band:	2°F to 9°F in 1°F steps			4°F	
			Overcooling allowed to dehumidify:	0°F to 3°F in 1°F steps			0°F	
		changeover settings	start timer diff	1, 2, 3, 4°F (0.5, 1, 1.5, 2.0°C)			1°F	
			forced changeover dff	1, 2, 3, 4°F (0.5, 1, 1.5, 2.0°C)			1°F	
	changeover timer	15 to 60 min. in 15 min. steps			15		Timer started on heat-to-cool or cool-to-heat transition so doesn't change modes too quickly. Timer is ignored if forced changeover diff is reached.	
	house settings	House size	500 to 10,000 sf in 100 sf steps					
	dealer information	name	(text entry)					
		phone	(text entry)					
		email	(text entry)					
		website	(text entry)					
		message	(text entry)					
	reminders	Standard filter	off, 1, 2, 3, 4, 6, or 12				off	if added in "add equipment"
		Filter box	off, 1, 2, 3, 4, 6, or 12 months				off	if added in "add equipment"
HEPA filter		off, 1, 2, 3, 4, 6, or 12				off	if added in "add equipment"	
service reminder		off, 3, 6, or 12 months				off	if added in "add equipment"	